



Fig. 16. ENGINE UNIT FITTINGS AND FOOTRESTS

ENGINE UNIT FITTINGS AND FOOTRESTS

1	S571	Stud, front engine to frame ($3\frac{7}{8}$ in. O.A.)	1	
2	14-0304	Nut, stud	2	
3	99-0046	Spring washer	2	
4	S572	Stud (bottom) engine to frame ($10\frac{1}{2}$ in. O.A.)	1	
5	14-0304	Nut, stud	2	
6	99-0046	Spring washer	2	
7	F5532	Spacer, bottom engine fixing	1	
8	F9623	Drive side footrest	1	
9	F9624	Timing side footrest	1	
10	F5943	Peg	4	
11	S1969	Bolt, footrest ($1\frac{1}{8}$ in. U.H.)	2	
12	F8243	Washer, footrest stud	2	
13	14-0401	Locknut	1	
14	F9279	Footrest rubber D.S.	1	
15	F9630	Footrest rubber T.S.	1	
16	F11597	Rear engine plate D.S.	1	
17	F11594	Rear engine plate T.S.	1	
18	F11598	Spacer D.S. rear engine plate	2	
19	14-0222	Bolt, D.S. rear engine plate to engine ($2\frac{1}{4}$ in. U.H.)	2	
20	14-0221	Bolt, T.S. rear engine plate to engine (2 in. U.H.)	2	
21	S25-3	Washer, rear engine plate to engine	4	
22	S26-3	Spring washer	4	
23	14-1302	Nut	4	
24	S548	Stud, T.S. pivot lug to engine plate ($1\frac{3}{8}$ in. O.A.)	1	
25	14-0132	Bolt, D.S. pivot lug to engine plate	1	
26	F3770	Washer	1	
27	F7389	Nut	2	
28	14-0128	Bolt, upper rear engine plate to frame ($\frac{3}{4}$ in. U.H.)	2	
29	14-0234	Bolt, lower rear engine plate to frame ($1\frac{3}{4}$ in. U.H.)	2	
30	S26-1*	Spring washer	4	
31	14-1303	Nut	2	
32	14-0403	Nut	2	
33	F9379	Torque stay engine R.H.	1	
34	F9378	Torque stay engine L.H.	1	
35	S25-2	Washer	2	
36	14-0302	Nut	2	
37	14-0237	Bolt, torque stay to frame ($2\frac{1}{4}$ in. U.H.)	1	
38	S25-2	Washer	2	
39	14-1303	Nut	1	
40	F9635	Rear brake pedal	1	
41	F6064	Lever	1	
42	S26-1	Spring washer	1	
43	14-0303	Nut	1	
44	14-0106	Stop bolt (1 in. U.H.)	1	
45	14-0103	Adjuster, stoplamp switch ($\frac{3}{4}$ in. U.H.)	1	
46	14-0401	Nut, adjuster	2	
47	F7386	Brake rod	1	
48	S25-13	Washer	1	
49	—	Split pin, ($\frac{1}{16}$ in. x $\frac{3}{8}$ in.)	1	Reference only
50	F7387	Adjuster nut	1	
51	F9529	Oil pipe retaining strap	1	