



Fig. 26. PANELS AND TWINSEAT

**PANELS AND TWINSEAT**

1	F9362	D.S. Panel	1	
2	F9363	T.S. Panel	1	
3	F9591	Beading D.S.	1	
4	F9592	Beading T.S.	1	
5	F8631	Clip	6	
6	F6673	Grommet	2	
7	S1833	Lock nut	1	
8	S25-71	Washer	1	
9	F9442	Rubber spacer	1	
10	F9445	Release knob	1	
11	F9590	Boss	1	
12	14-2205	Screw T.S. panel to oil tank	4	
13	F9442	Rubber	4	
14	D1905	Transfer 'Trident' D.S.	1	
14	D1906	Transfer 'Trident' T.S....	1	
15	F9996	TWINSEAT	1	
16	F9715	Twinsseat cover	1	
17	F7560	Knob	1	
18	F4228	Spring	1	
19	E1719	Washer	1	
20	—	Split pin ( $\frac{3}{32}$ in. x $\frac{1}{2}$ in.)		Reference only
21	D696	Trim strip	1	
22	D697	Sprag	4	
23	F4898	Buffer	2	
24	F8026	Front hinge	1	
25	F7862	Rear hinge	1	
26	F7835	Buffer	2	
27	14-0101	Bolt, hinge ( $\frac{1}{2}$ in. U.H.)	4	
28	S26-2	Spring washer	4	
29	D2087	Check wire	1	
30	D2381	Self tapping screw	1	
31	F9650	Toolbox	1	
32	14-0503	Screw, toolbox to battery carrier	1	
33	14-0102	Bolt	2	
34	14-1301	Nut	3	
35	F9770	Panel buffer	2	
36	F9749	Toolroll strap	1	
37	D2524	Clip, clutch cable	1	