



Fig. 10. GEARBOX INNER COVER AND SELECTORS

| Ref. No. | Part No. | DESCRIPTION | QUANTITY | REMARKS |
|----------|----------|-------------|----------|---------|
|----------|----------|-------------|----------|---------|

GEARBOX INNER COVER AND SELECTORS

| | | | | |
|----|---------|--|---|---------------------------|
| 1 | T4327 | INNER COVER | 1 | |
| 2 | T1614 | Layshaft Bearing | 1 | |
| 3 | T45 | Kickstart stop | 1 | |
| 4 | T412 | Bush (F/C spindle) | 1 | |
| 5 | T1606 | Layshaft, needle roller bearing | 1 | |
| 6 | T1607 | Thrust washer | 2 | |
| 7 | T912 | Peg, L/S thrust washer | | (Also in crankcase group) |
| 8 | T989 | Dowel, inner to outer cover | 2 | |
| 9 | T4363 | Quadrant | 1 | |
| 10 | T1896 | Quadrant spindle | 1 | |
| 11 | — | Split pin (5/64 in. x 1 $\frac{3}{8}$ in.) | | Reference only |
| 12 | 14-7101 | Socket screw | 1 | |
| 13 | 14-6121 | Bolt, inner cover to crankcase | 1 | |
| 14 | E3446 | Washer, inner cover to crankcase | 2 | |
| 15 | S1917 | Screw inner cover to crankcase | 2 | |
| 16 | 14-1431 | Stud, gearbox cover | 2 | |
| 17 | T4624 | Camplate | 1 | |
| 18 | E11447 | Gasket, inner cover to crankcase | 1 | |
| 19 | T3660 | Plunger | 1 | |
| 20 | T4459 | Plunger spring | 1 | |
| 21 | T4400 | Plunger sleeve nut | 1 | |
| 22 | T3978 | Washer | 1 | |
| 23 | T2166 | Filler cap | 1 | |
| 24 | E8782 | "O" ring | 1 | |
| 25 | T4364 | Selector fork - m/s 4th gear | 1 | |
| 26 | T4366 | Selector fork - 1/s 3rd gear | 1 | |
| 27 | T4660 | Selector fork - 1/s 1st gear | 1 | |