



B8

Fig. II GEARBOX INNER COVER AND SELECTORS

**GEARBOX INNER COVER AND SELECTORS**

	Ref. No.	Part No.	DESCRIPTION	QUANTITY	REMARKS
1	57-4795		GEARBOX INNER COVER ... ..	1	
2	57-1614		Layshaft bearing ... ..	1	
3	57-0412		Gearchange spindle bush... ..	1	
4	57-0045		Kickstart stop ... ..	1	
5	57-1607		Thrust washer ... ..	2	
6	57-0989		Hollow dowel ... ..	4	
7	21-2149		Stud ... ..	2	
8	21-1907		Bolt ... ..	1	
9	70-3446		Washer ... ..	1	
10	14-6608		Screw ... ..	1	
11	14-7023		Screw ... ..	1	
12	57-4624		Camplate ... ..	1	
13	57-4363		Operating quadrant ... ..	1	
14	57-1896		Quadrant spindle ... ..	1	
15	—		Split pin ( $\frac{5}{64}$ in. x $1\frac{3}{8}$ in.) ... ..	1	Reference only
16	57-3989		Selector fork rod ... ..	1	
17	57-3660		Index plunger ... ..	1	
18	57-4459		Plunger spring ... ..	1	
19	57-4400		Housing, index plunger ... ..	1	
20	57-3978		Washer ... ..	1	
21	71-3096		Joint washer, inner cover to crankcase ... ..	1	
22	57-4364		Selector fork - mainshaft 4th gear ... ..	1	
23	57-4366		Selector fork - layshaft 3rd gear ... ..	1	
24	57-4660		Selector fork - layshaft 1st gear ... ..	1	