



B8

Fig. II GEARBOX INNER COVER AND SELECTORS

**GEARBOX INNER COVER AND SELECTORS**

1	57-4795	GEARBOX INNER COVER ... ..	1	
2	57-1614	Layshaft bearing ... ..	1	
3	57-0412	Gearchange spindle bush... ..	1	
4	57-0045	Kickstart stop ... ..	1	
5	57-1607	Thrust washer ... ..	2	
6	57-0989	Hollow dowel ... ..	4	
7	21-2149	Stud ... ..	2	
8	21-1907	Bolt ... ..	1	
9	70-3446	Washer ... ..	1	
10	14-6608	Screw ... ..	1	
11	14-7023	Screw ... ..	1	
12	57-4624	Camplate ... ..	1	
13	57-4363	Operating quadrant ... ..	1	
14	57-1896	Quadrant spindle ... ..	1	
15	—	Split pin ( $\frac{5}{64}$ in. x $1\frac{3}{8}$ in.) ... ..	1	Reference only
16	57-3989	Selector fork rod ... ..	1	
17	57-3660	Index plunger ... ..	1	
18	57-4459	Plunger spring ... ..	1	
19	57-4400	Housing, index plunger ... ..	1	
20	57-3978	Washer ... ..	1	
21	71-3096	Joint washer, inner cover to crankcase ... ..	1	
22	57-4364	Selector fork - mainshaft 4th gear ... ..	1	
23	57-4366	Selector fork - layshaft 3rd gear ... ..	1	
24	57-4660	Selector fork - layshaft 1st gear ... ..	1	